
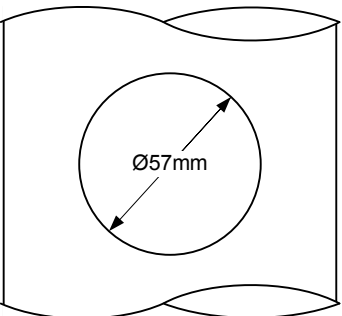
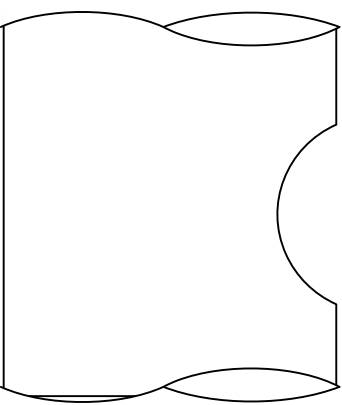
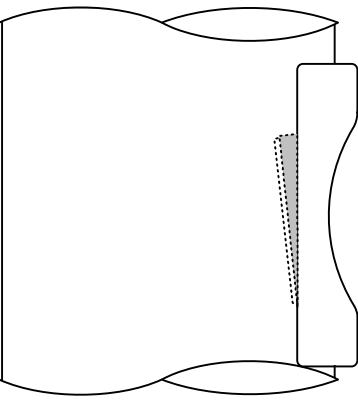


BOSSCONN110/82

1.  Cut 57mm hole in 110mm or 82mm pipe.
2.  Insert Boss with seal into hole.
TOP (5° Fall)
Boss with seal
Fixing Tool
3.  TOP (5° Fall)
Insert Fixing Tool into Boss and turn NO MORE than three times ANTI-CLOCKWISE to tighten.
4.  Remove Fixing Tool and fit nut and seals to pipe to complete installation.
Universal Inlet

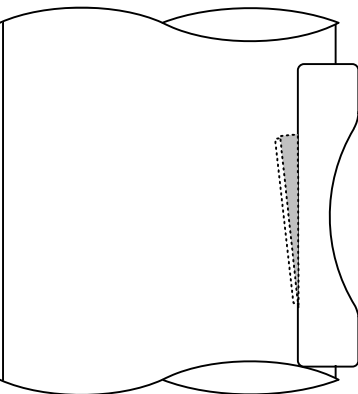